


TEMPORARY STRAND CUTTING SEQUENCE

- 1. ERECT AND BRACE GIRDERS.
- 2. REMOVE EXPANDED POLYSTYRENE IN 2" X 2" RECESSES IN TOP FLANGE OF GIRDERS.
- 3. CUT STRAND AND PLASTIC SLEEVE IN 2" X 2" RECESS.
- 4. REMOVE ALL MOISTURE IN RECESS PRIOR TO FILLING RECESS WITH GROUT.
- 5. CAST INTERMEDIATE & END DIAPHRAGMS.
- 6. PLACE DECK CONCRETE.
- 7. SEE SHEET W83G GIRDER DETAILS 3 OF 3 FOR 2" RECESS BLOCKOUT DETAILS.

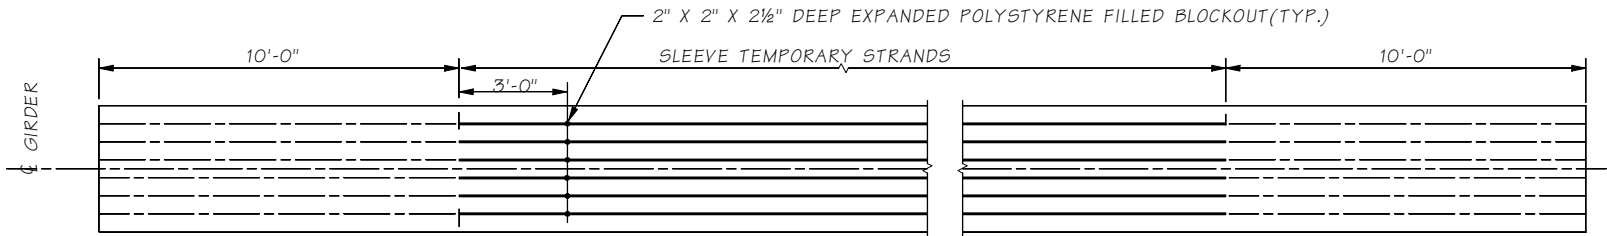

PLAN VIEW OF TEMPORARY STRANDS

Bridge Design Engr.	M:\STANDARDS\Girders\Trapezoidal Tubs\SIP TRAPEZOIDAL TUB 3.MAN													
Supervisor					REGION NO.	STATE	FED. AID PROJ. NO.	SHEET NO.	TOTAL SHEETS					
Designed By					10	WASH.								
Checked By					JOB NUMBER									
Detailed By														
Bridge Projects Engr.														
Prelim. Plan By														
Architect/Specialist	DATE	REVISION	BY	APPD										

Tue Apr 29 13:44:49 2008

BRIDGE AND STRUCTURES OFFICE



Washington State Department of Transportation

STANDARD PRESTRESSED CONCRETE GIRDERS

TRAPEZOIDAL TUB S-I-P DECK  
PANEL GIRDER - DETAILS 3 OF 4

BRIDGE SHEET NO.  
SHEET  
OF  
SHEETS